

Setting Menu Language

1. On the main menu, select **System** → **Language**.
2. Select the language you want, and press OK.

Setting Date and Time

1. On the main menu, select **Extras** → **Date & Time**.
2. Press $\overline{\text{F5}}$ and select **Set Date** or **Set Time**.
3. Use the Direction Pad to select a date or time field.
4. Press Δ or ∇ to change the value of the field, and press OK.

Setting FM Radio Channels

1. Connect the earphones to your player.
2. On the main menu, select **FM Radio**.
3. Press $\overline{\text{F5}}$ and select **Autoscan**.
4. When prompted to start the autoscan, select **Yes**.

Turning On/Off the Speaker

1. Press $\overline{\text{F5}}$.
2. Select **Turn on Speaker** or **Turn off Speaker**.

Selecting a Play Mode

Play Mode is where you repeat or shuffle music.

In the main menu, select **System** → **Audio Settings** → **Play Mode**.

Enhancing Audio Using X-Fi

- To make audio richer, clearer, and closer to the original sound, select **X-Fi** → **X-Fi Crystalizer: On**.
- To give sound a realistic and “live performance” feel, select **X-Fi** → **X-Fi Expand: On**.


Works best when used on earphones or headphones.

NOTE

When using your player together with X-Fi headphones or external X-Fi speakers, enable X-Fi features on either the player **or** the accessory only.

Navigating a List Quickly


When you have a long list of items, the alphabet bar helps you to move quickly from one part of the list to another.

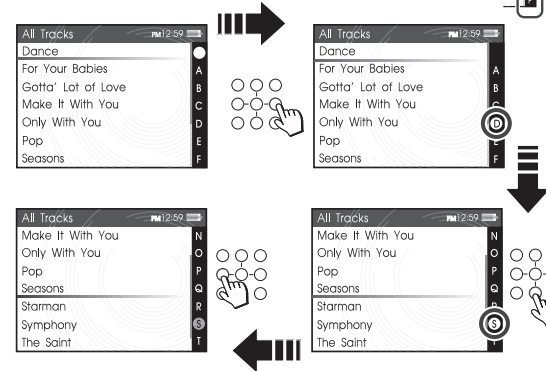

NOTE The alphabet bar appears in selected menus.

Inserting a Memory Card Correctly

- ① Hold the memory card by the sides and insert in a straight manner.
- ② **GENTLY** push until the memory card locks in place.

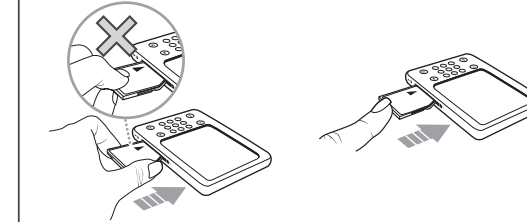

Ejecting a Memory Card Correctly

- ① Push to eject.
- ② **GENTLY** take out in a straight manner.



Browsing and Playing From a Memory Card

1. In the main menu, select **Memory Card**.
2. Select **Browse**.
3. Navigate through the folders and select a file to play. Alternatively, press $\blacktriangleright \parallel$ to play files automatically.

More Information

User's Guide	www.creative.com/zenxfi/getstarted
Customer Support Service and Creative Knowledge Base	www.creative.com/support
Product Registration	www.creative.com/registration Please note that warranty rights are not dependent on product registration.
User's Guide	d:\manual\<language>\manual.chm
Warranty	d:\warranty\<region>\<language>\warranty.chm Please keep your Proof of Purchase for the duration of the warranty period.

Replace **d:** with the drive letter of your CD/DVD drive, **<region>** with the region that you are in, and **<language>** with a language that your User's Guide is available in.

Keep this document for future reference.

ZEN X-Fi




PN 03PF24200006RevA

Quick Start

Welcome to a new level in Personal Digital Entertainment. Your ZEN X-Fi™ player is a state-of-the-art music and video player plus a whole lot more!

In just a few steps, you'll experience crystal clear audio in amazing realism with Creative's latest X-Fi technology.


For players with instant messaging and wireless features, read the **ZEN X-Fi Networking Quick Guide** leaflet.

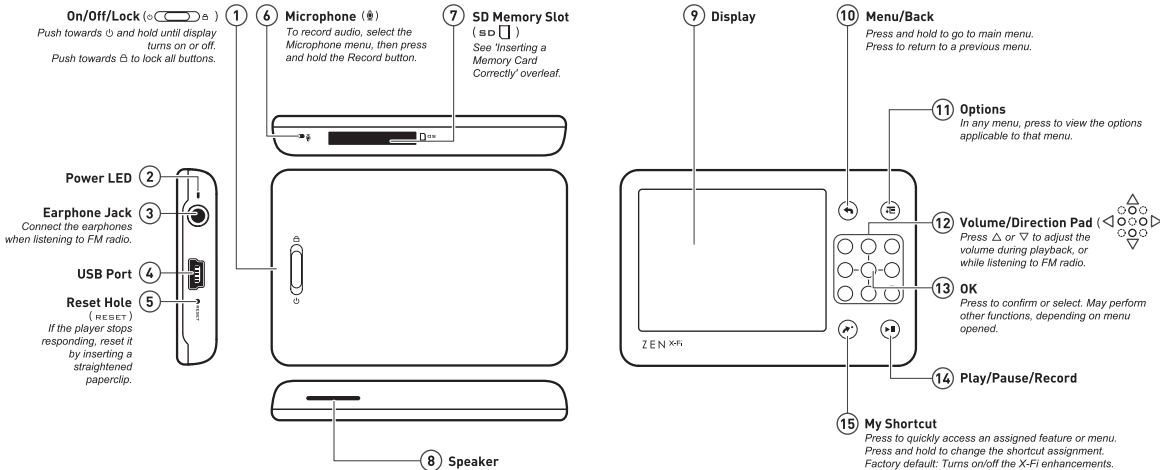

1 Installing Software and User's Guide*

Install the **Creative Centrale™** software **BEFORE** connecting your player to your computer.

Run the installation CD on your computer and follow the instructions on the screen. Restart your computer when prompted.

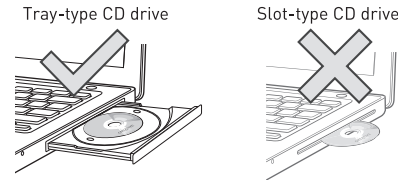

IMPORTANT For computers with slot-type CD drives, download the Creative Centrale software and User's Guide at www.creative.com/zenxfi/getstarted.


* Available in selected languages

2 Charging Your Player

IMPORTANT

- Make sure that your computer is turned on, and not on standby or in hibernation.
- Avoid using a USB hub.

Charge for at least 4 hours before first use.

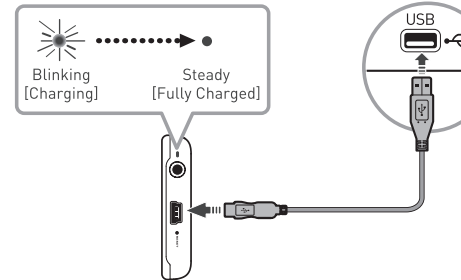

NOTE To charge from a power outlet, use a ZEN USB power adapter [sold separately at www.creative.com/zenadapter].

3 Transferring Content


While your player is connected to your computer, you can transfer files using Creative Centrale. From your computer, simply drag and drop your files into your player. For more information, click the Help button in Creative Centrale.

Disconnecting Your Player Safely

- WARNING**
- On your player, the above icon animates during file transfer. **DO NOT** disconnect your player at this time.
 - Disconnect the player only when file transfer is complete, and the icon is static.

4 Setting Basic Functions

To set basic functions, first learn to navigate the menus on your player.

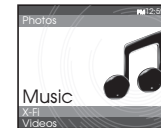

Main Menu

To view the main menu, press and hold $\leftarrow$.

To navigate menus and options, press Δ or ∇ .


To make a selection, press OK.



Submenu

In a menu, press Δ or ∇ to highlight an item, then press OK.

To return to the previous screen, press $\leftarrow$.

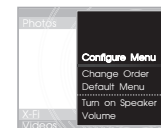

Options

In any menu, press $\rightarrow$ to view the available options.

To exit, press $\leftarrow$.